Title:	How to call one main indoor station	Version:	v1.0	Date:	9/25/2017
	and one indoor extension using villa				
	door station (FW 1.4.71)				
Product:	Video Intercom Device	Page:	1 of 5		



Preparation

- 1. Two indoor stations and one villa door station;
- 2. Client software iVMS-4200 (V2.6.2.50).

Note:

- 1. All devices' firmware version should be the same (V1.4.71 it is in this document);
- 2. This guide only uses a simple video intercom system to demonstrate the function, which only contains indoor stations and villa door station. No master station is contained.


Step 1: Add Devices to iVMS-4200

- Go to Device Management-> Add to Client to add all devices (two indoor stations and one villa door station) to iVMS-4200;
- Make sure all device IP addresses are in the same local network. Click Modify Netinfo to modify the address if they are not.



Step 2: Set Villa Door Station


- 1) Go to Intercom->ID Configuration to select the Device Type as Door Station(V Serie);
- 2) Set a **No.** (ranges from $0\sim6$). 0 represents main station while $1\sim6$ repersents extention station;
- 3) Click Save to finish;

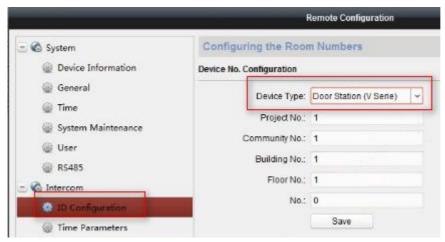

Title:	How to call one main indoor station and one indoor extension using villa	Version:	v1.0	Date:	9/25/2017	
	door station (FW 1.4.71)					
Product:	Video Intercom Device	Page:	2 of 5			




- 4) Go to **Intercom**->**Dial** to link the button on villa door station to indoor stations. For example, 1-0-1 means that button 1 could call room 1, 2-0-2 means that button 2 could call room 2;
- 5) Click Save to finish;

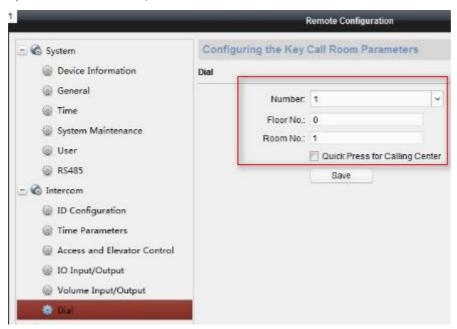

Step 3: Set Main Indoor Station

 1) Select one indoor station, click **Remote Configuration**;




- 2) Go to Intercom-> ID Configuration, select Device Type as Indoor Station;
- 3) Set a room number (ranges from 1-9999);
- 4) Click **Save** to finish.




	<u> </u>			_		
Product:	Video Intercom Device	Page:	3 of 5			HIKVISION
	door station (FW 1.4.71)					
	and one indoor extension using villa					
Title:	How to call one main indoor station	version:	V1.0	Date:	9/25/2017	

- 5) Go to Network -> Linked Network Configuration, input (Main) Door Station IP Address as the villa door station's IP address;
- 6) Choose Main Door Station type as Main Door Station(V Series);
- 7) Click Save to finish.

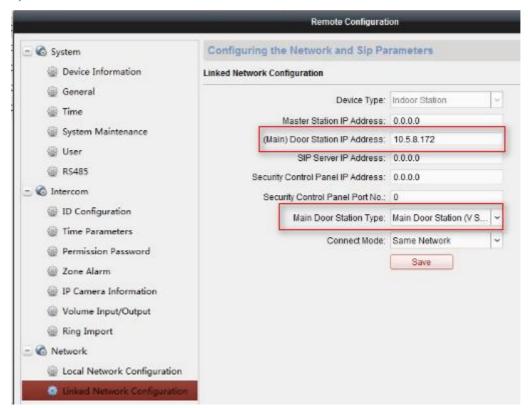

Step 4: Set Indoor Station Extension


- 1) Select the other indoor station, click **Remote Configuration**-> **Intercom-> ID Configuration**, set **device type** as **Station Extension**;
- 2) Set the **NO.** as 1 since it is the first indoor extension(up to 5 extensions could be set);
- 3) Click **Save** to finish. This indoor station will reboot automatically after this step.

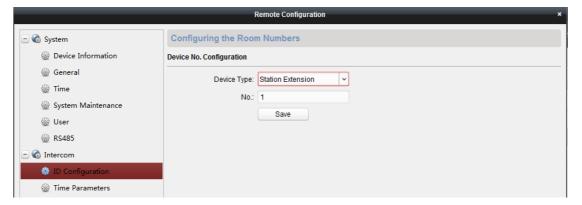

- 4) Go to **Network -> Linked Network Configuration->Main Indoor Station IP Address**, input the IP address as the one of Indoor station that you set up in step 2;
- 5) Click Save to finish.

Title:	How to call one main indoor station and one indoor extension using villa door station (FW 1.4.71)	Version:	v1.0	Date:	9/25/2017
Product:	Video Intercom Device	Page:	4 of 5		



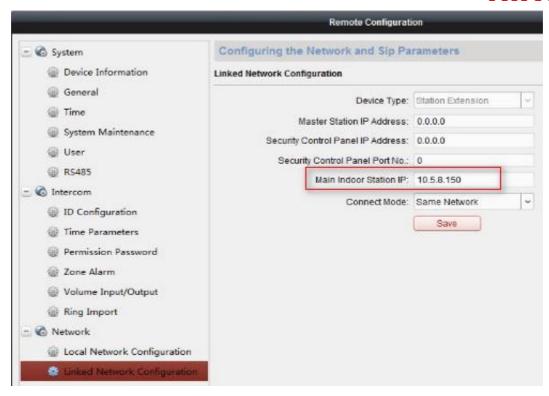

Step 5: Make a Call Using Villa Door Station

Press the call button on villa door station, then the indoor station and the indoor station extension will receive the call simultaneously.



Title:	How to call one main indoor station and one indoor extension using villa	Version:	v1.0	Date:	9/25/2017
	door station (FW 1.4.71)				
Product:	Video Intercom Device	Page:	5 of 5		



First Choice for Security Professionals HIKVISION Technical Support